





**FOIOS**  h.3 cm. acabado liso


 A medida / Made-to-measure / Sur mesure



/ Solid Surface / Platos de ducha\_Shower tray\_Receveur

PVP\_pag. 30 tarifa / PVP\_pag. 30 rate / PVP\_pag. 30 tax

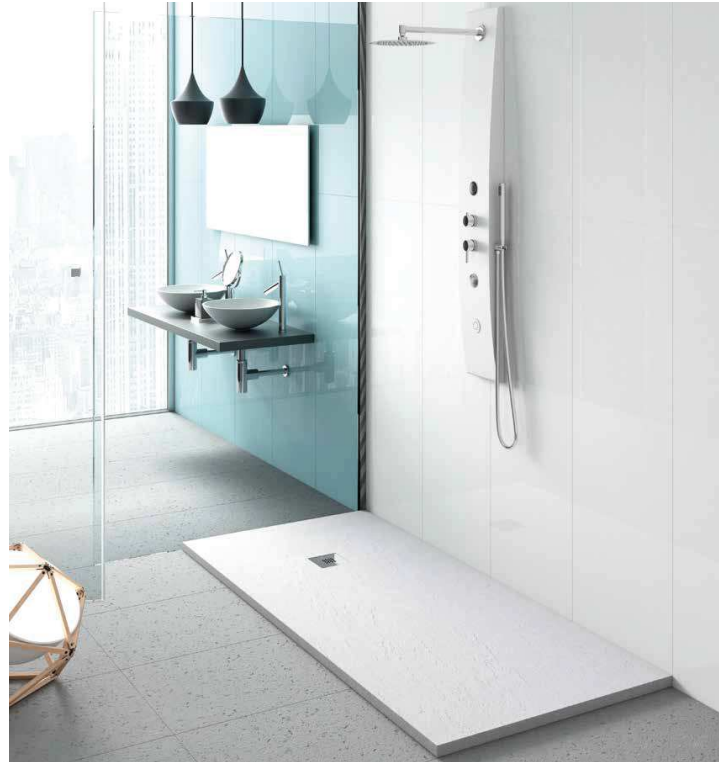

**CIRAT**  h.3 cm. acabado pizarra

 A medida / Made-to-measure / Sur mesure



PVP\_pag. 30 tarifa / PVP\_pag. 30 rate / PVP\_pag. 30 tax

## INFORMACIÓN Y MEDIDAS


Information and measures / Information et mesures

### FOIOS h.3 cm. acabado liso

Medidas generales / Measures generic / Mesures generique



| Ancho / Width / Largeur<br>A | Largo / Length / Long<br>B  | C  | D  |
|------------------------------|-----------------------------|----|----|
| 70 cm.                       | 100                         | 14 | 35 |
| 70 cm.                       | 120 / 140 / 160 / 180       | 24 | 35 |
| 80 cm.                       | 100                         | 14 | 40 |
| 80 cm.                       | 120 / 140 / 160 / 180 / 200 | 24 | 40 |
| 90 cm.                       | 120 / 140 / 160 / 180 / 200 | 24 | 45 |




### CIRAT h.3 cm. acabado pizarra

Medidas generales / Measures generic / Mesures generique



| Ancho / Width / Largeur<br>A | Largo / Length / Long<br>B          | C  | D  |
|------------------------------|-------------------------------------|----|----|
| 70 cm.                       | 100 / 120 / 140 / 160 / 180         | 41 | 35 |
| 80 cm.                       | 100 / 120 / 140 / 160 / 180 / 200 / | 41 | 40 |
| 90 cm.                       | 120 / 140 / 160 / 180 / 200         | 41 | 45 |



## COMPLEMENTOS

Supplements / Suppléments

### ASIENTOS Seat / Siège



Asiento Corian  
Corian seat  
Siège de Corian



Asiento madera  
Wooden seat  
Siège en bois

### VÁLVULA Outlet / Vidance

Montaje de la válvula / Assembly of the outlet drain /  
Montage de la valve de vidance

- 

Montar la válvula con tubo flexible dejándola libre para poder centrarla / Mount the outlet to the pipe and let it free / Monter la valve avec un tube flexible en la laissant libre pour pouvoir la centrer
- 

Poner el plato encima de la válvula / Install the shower tray above the outlet / Mettre le plateau au-dessus de la valve
- 

Colocar el anillo metálico centrándolo al plato y atornillar / Place the metal ring centered and screw it / Placer l'anneau métallique en le centrant au plateau et le visser